




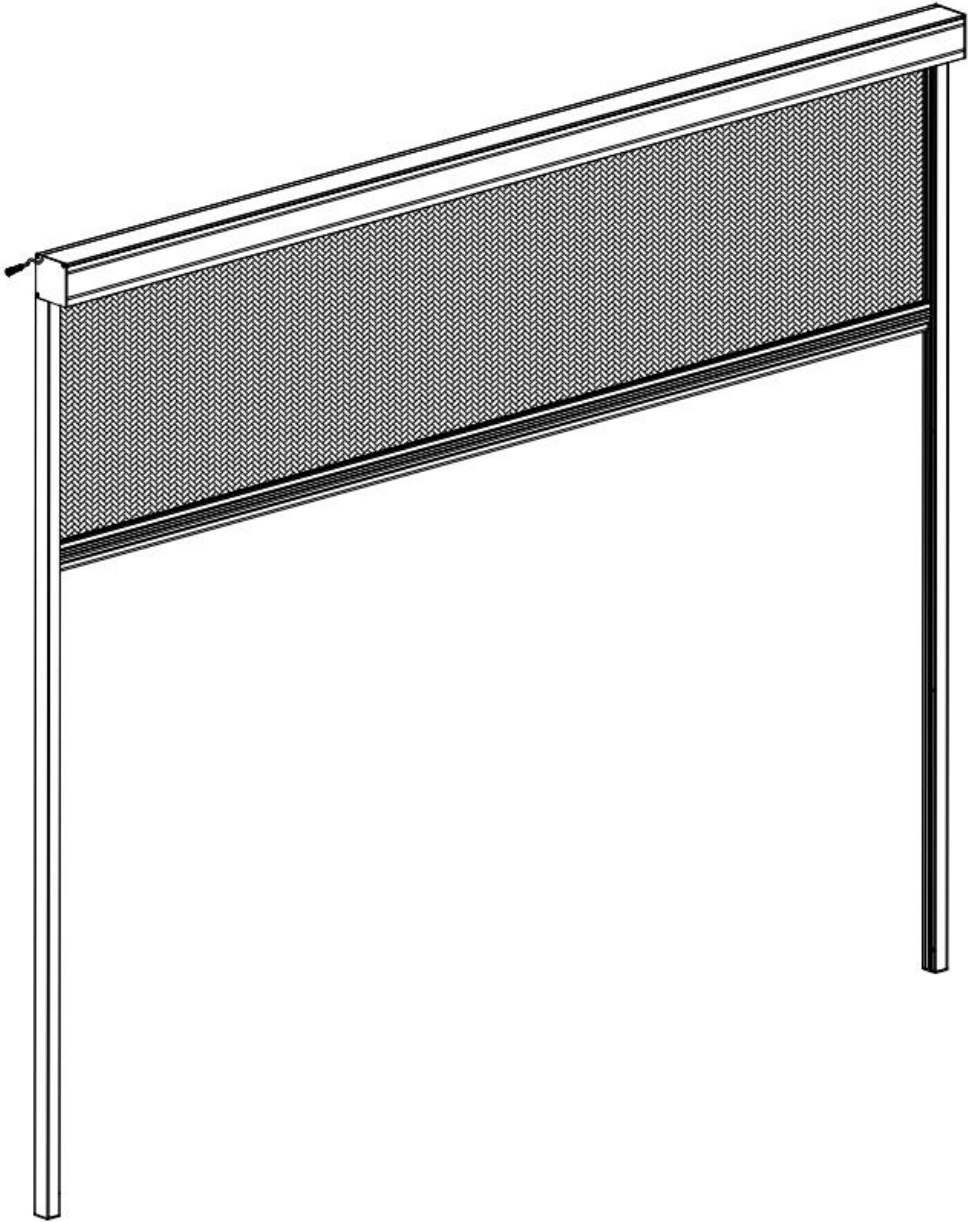


Motorized Zip Blind Installation Manual




Parts list for Zip Blind


Item No	Picture	Qty	Part Name
A/B/C /D		1	The body part of zip blind
A/B/C /D		2	Track system
E		1	3mm Allen wrench
AA		8	3.9*16 Cross countersunk head tapping screw
BB		8	Screw hole cap

Disassemble the track system

X2



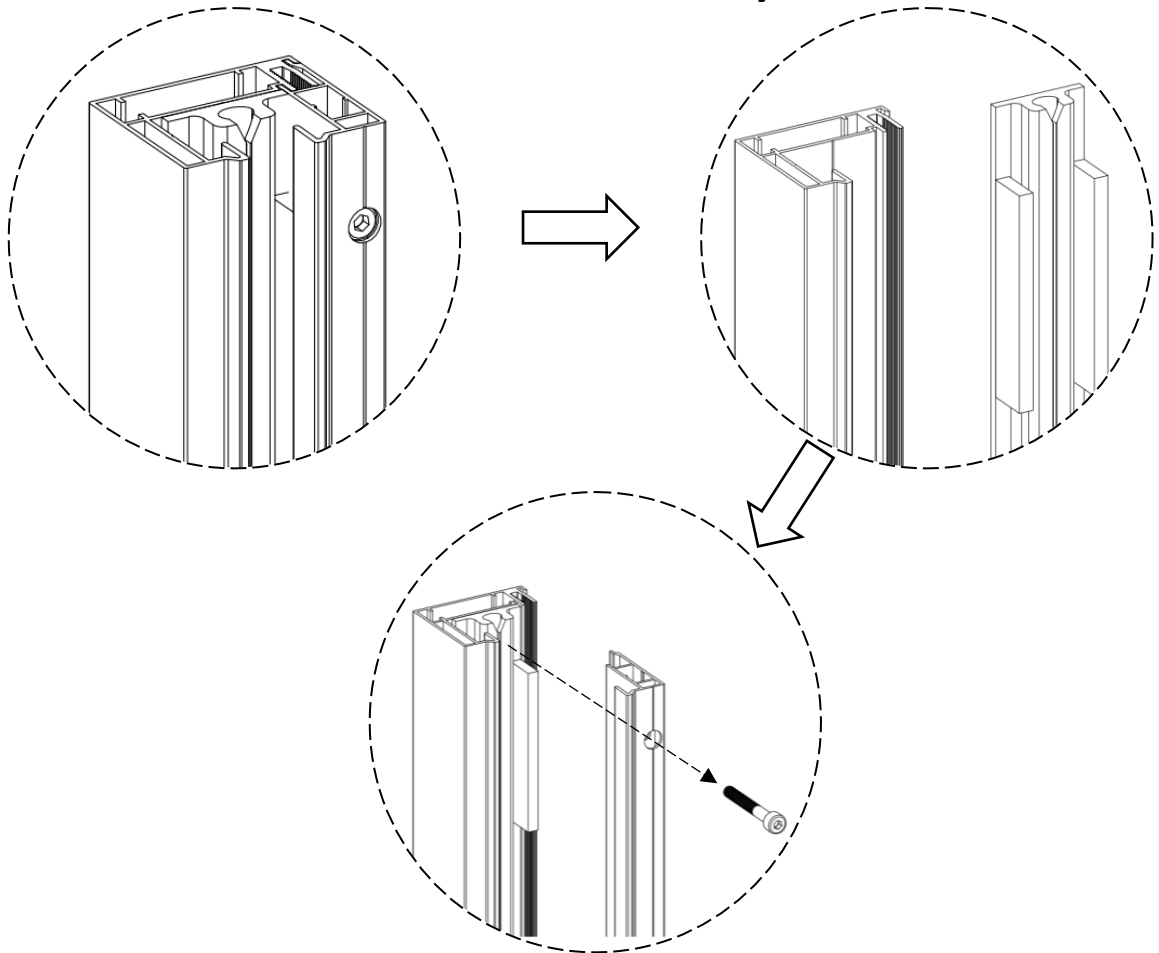



Put the body part of zip blind into back track.

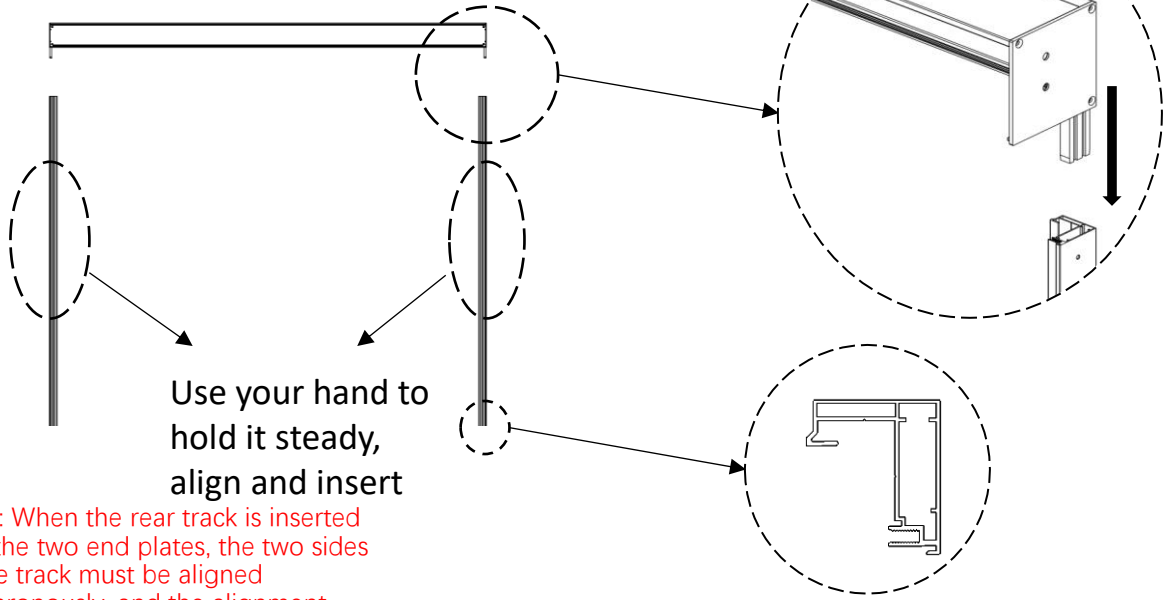






Use your hand to hold it steady, align and insert

Note: When the rear track is inserted into the two end plates, the two sides of the track must be aligned synchronously, and the alignment Angle must be the same.

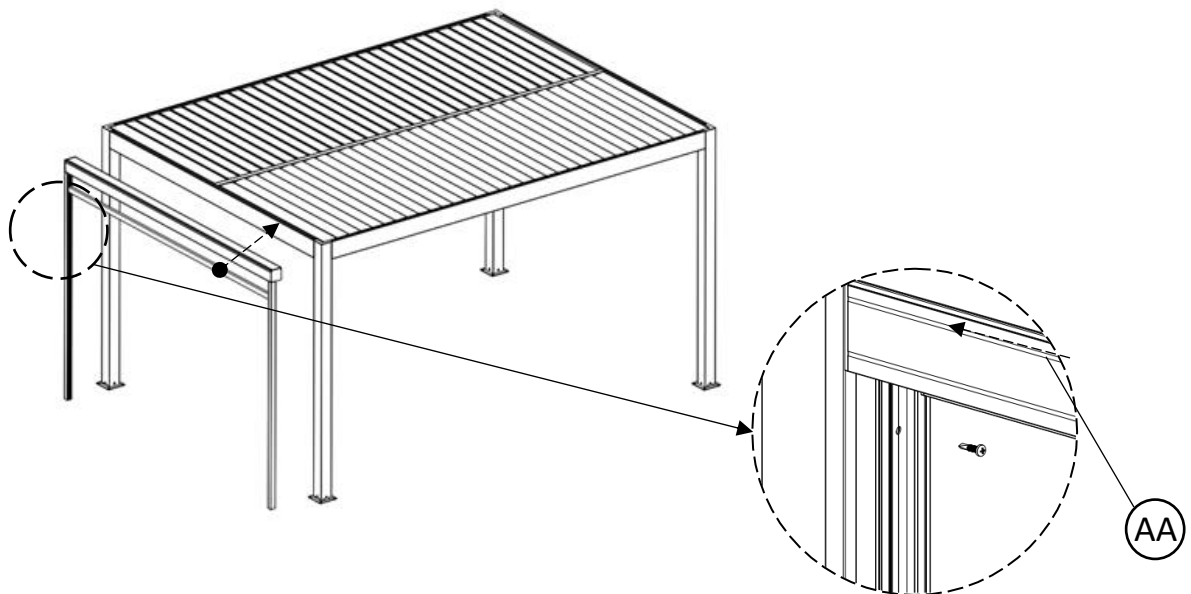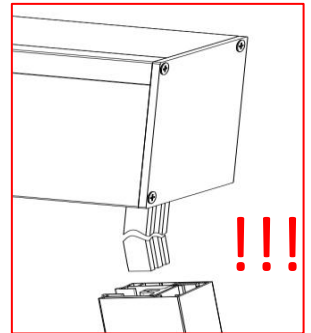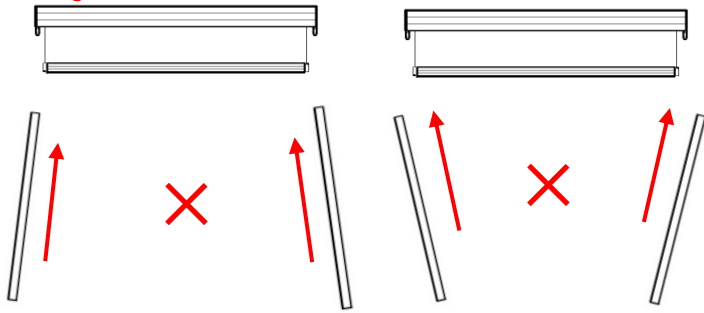


AA		<p>3.9*16 Cross countersunk head tapping screw</p>	X8
----	---	--	----

Zipper guide head up

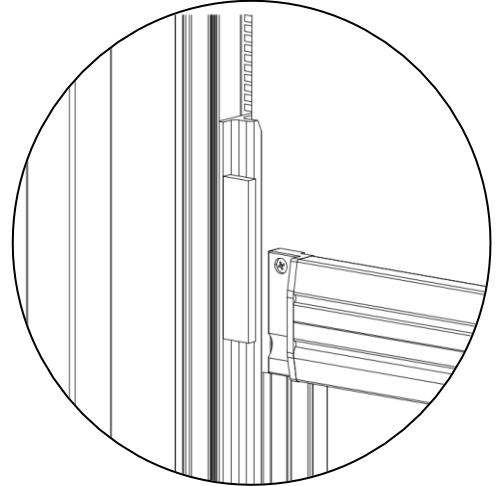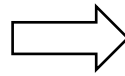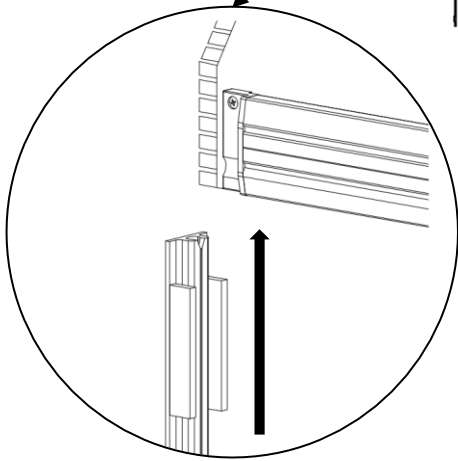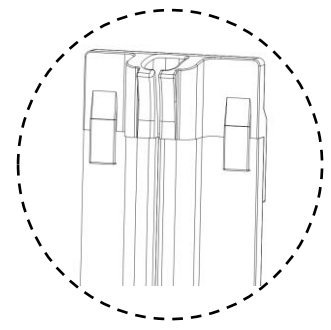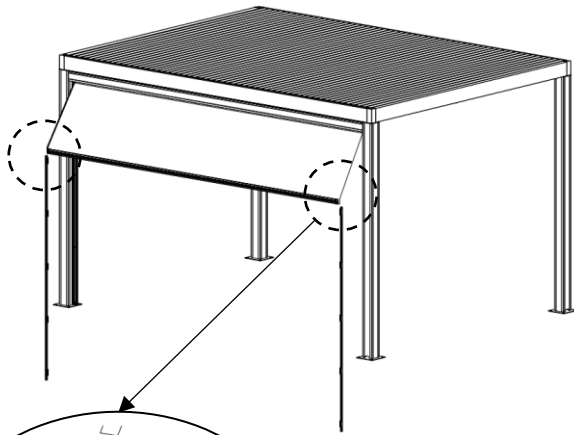


Install the inner track.


Insert the inner track into back track.

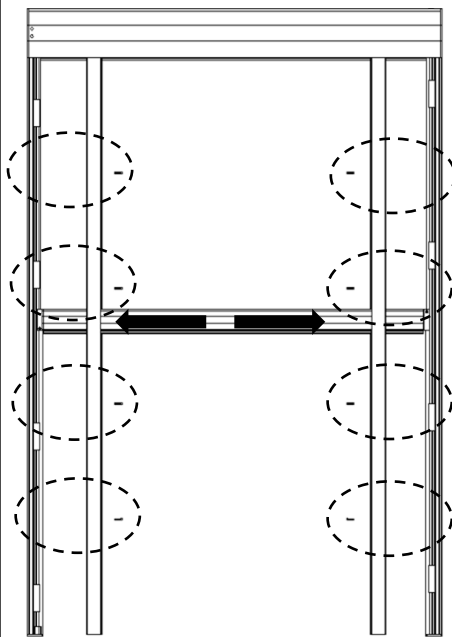

Install the front track.

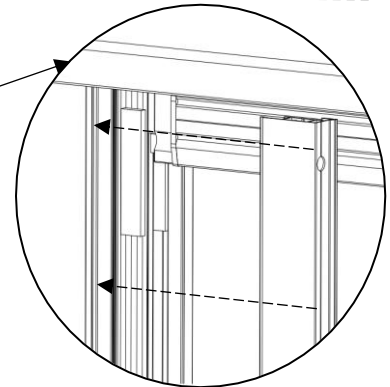

Screw and cover the screw hole cap.

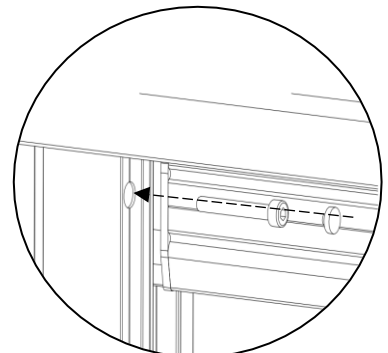

BB




Track screw hole cap


X8

Motor wiring


Case 1 When using an external motor:

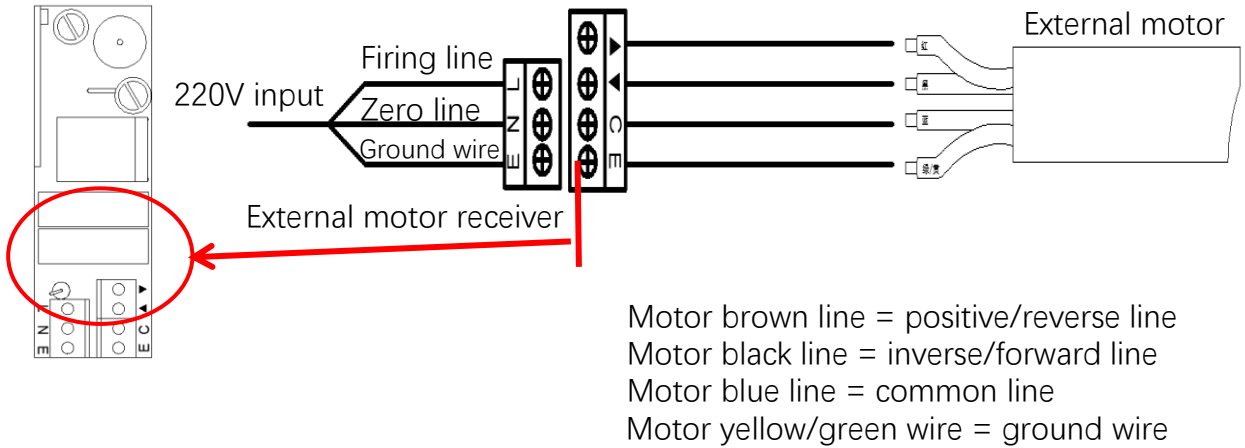


Case 2 When using the built-in motor:

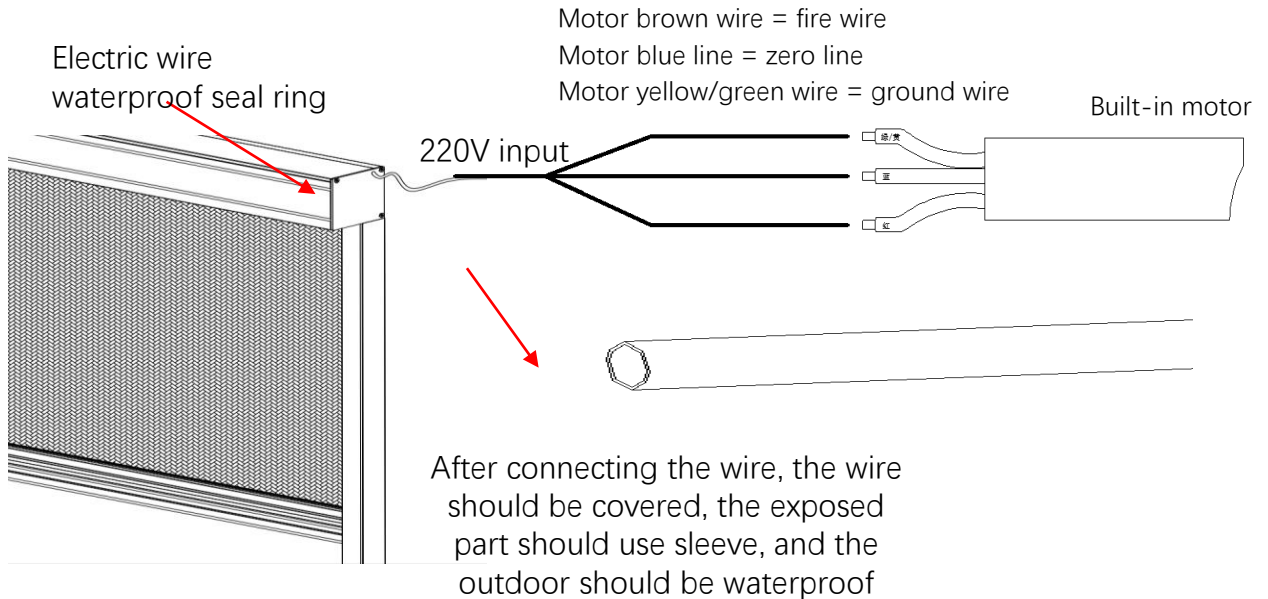

Motor Matching

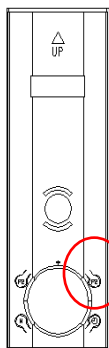

1. Press the p2 key twice within 3 seconds of hearing the buzzer when the motor is powered on.



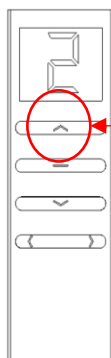


2. Press the up button once.



3. If the motor repeats the first step in reverse, press the down key once.

Zip Blind Using

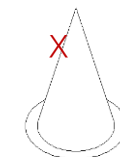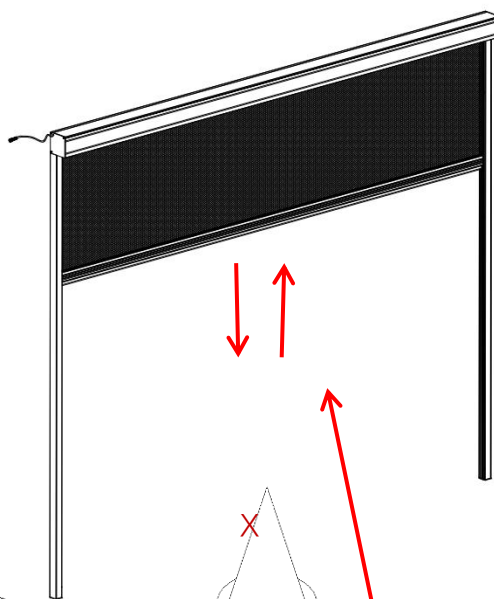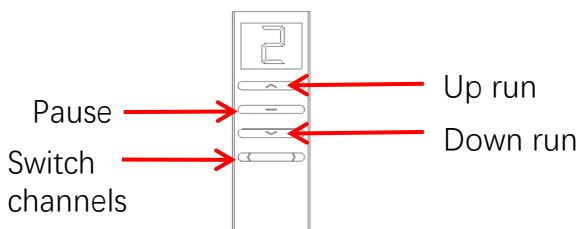

Please ensure that the lower pole is free of obstacles when the zip blind is running.